


CCT & Wattage Selectable

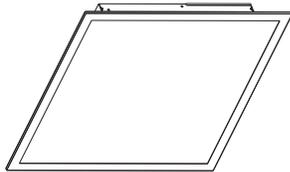

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to do so could lead to electric shock, fire or other injuries that could be hazardous or even fatal.

- Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION:

- The fixture body is one piece. Do not disassemble it.
- This panel fixture can be used with most dimmers that operate on a 0-10v system.
- Do not apply pressure on the panel face, please handle the fixture around the outer frame (metal trim housing). Damage to LEDs may occur if excessive force is applied to central panel face.

SAFETY INFORMATION


NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

PACKAGE CONTENTS

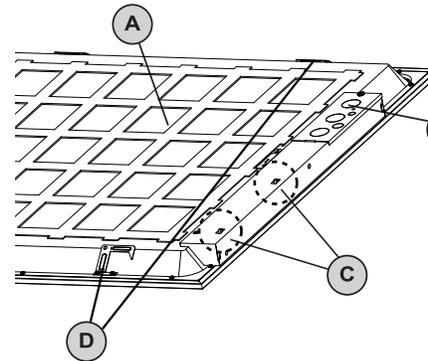

INSTALLATION INSTRUCTIONS

1. Locate the Driver Compartment access point, remove the screw to open the access panel and set the screw aside.

2. Route building supply wires through one of the 2 knockout holes and secure conduit to a wall with adapter (not supplied). Note that 2 knockout holes are available for routing building power supply wires and one (1) knockout is available for connecting optional low voltage 0-10v dimming leads.

NOTE: When handling the fixture, do not apply pressure to the panel face, please position the fixture using only the outer edge of the metal frame.

Installation Instruction

LED Back-lit Panel

Applicable models:
RGD-BLP6/MW/MK


INSTALLATION INSTRUCTIONS

3. Connect the fixture wires to the supply wires - black to black (Line), white to white (Neutral), and green to green (Ground).


If dimming will be enabled, connect the pink and purple wires to the supply dimming leads as well.

Once wire connections are made, secure each with a wire nut (AA).


Note: To adjust the light, you need to cut the terminal and connect it after stripping the cable.

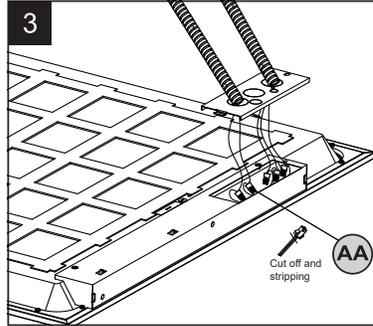

4. Tuck the wires and wire nuts (AA) into each respective compartment. Replace the Driver Compartment access panel (B), avoiding any pinched wires, and secure the panel with screw.

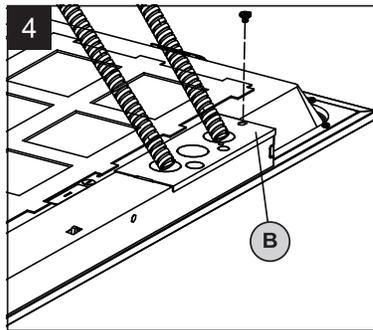

5. Pass the entire fixture above the suspended ceiling grid and align the fixture so that the perimeter of the front lens sits flush and secure on the T-grid lip. Fold out each of the 4 safety anchor points (E) and loop safety wires through each anchor and secure to building structure.

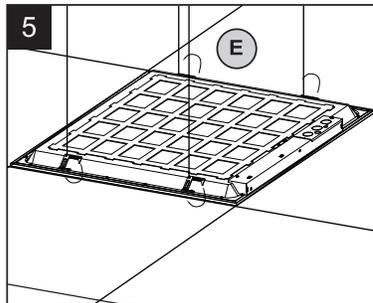

Installation Instruction

LED Back-lit Panel

INSTALLATION INSTRUCTIONS

6. **Optional:** Select the desired color temperature by using the CCT selection switch on the compartment enclosure by setting the switch to the desired CCT value as marked. The fixture wattage may also be set by using the selection switch by setting the switch position to the desired wattage value as marked.

CARE AND MAINTENANCE

Clean with a mild, non-abrasive glass cleaners containing abrasive agents. Turn the light off, and any liquid spray should be applied directly onto the fixture itself.

TROUBLESHOOTING

Problem	Possible Causes
Fixture does not light.	1. Power is off. 2. Incorrect wiring. 3. Defective fixture.
Circuit breaker trips when light is turned on.	Crossed wiring or shorted wire is grounded.

WARRANTY

This fixture is warranted to perform free of charge for a period of 5 years.