



WARNING

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

- LED Exit Signs are suitable for indoor use only. DO NOT use outdoors
- Please keep the LED Exit Signs away from any corrosive substance, and please use dry cloth when you clean it
- Before installation or maintenance, please disconnect the power to prevent electric shock

CAUTION


PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

- Electrical products can cause death or injury, or damage to property.
- If in any doubt about the installation or use of this product, consult a competent electrician.

APPLICATION NOTICE

1. Review the diagrams thoroughly before beginning.
2. All electrical connections must be in accordance with local codes, ordinances and the National Electric Code.
3. Disconnect power at fuse or circuit breaker before installing or servicing.
4. Do not mount in hazardous locations or near gas or electric heaters.
5. Do not let power cords touch hot surfaces.
6. Equipment should be mounted in locations and at heights where it will not be subject to tampering by unauthorized personnel.
7. The use of accessory equipment is not recommended by the manufacturer.
8. Allow battery to charge for 24 hours before first use.






WIRING DIAGRAM

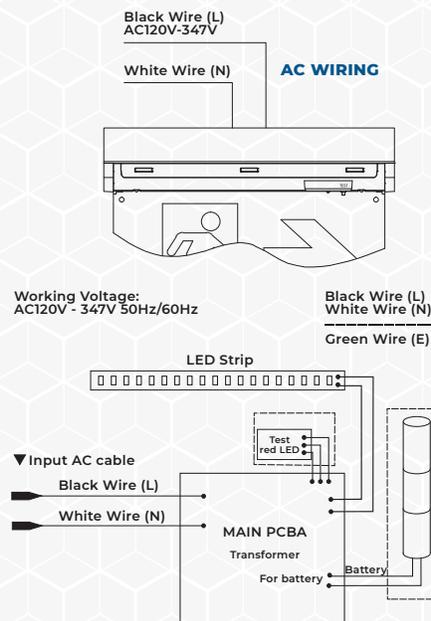






ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.



CEILING MOUNT

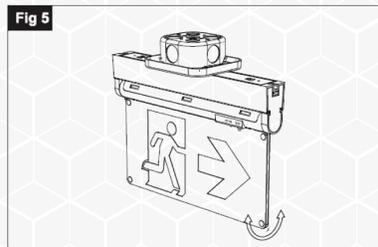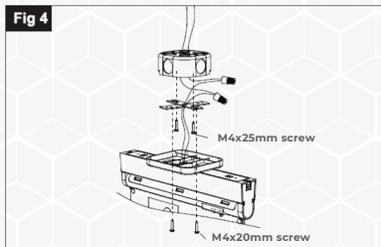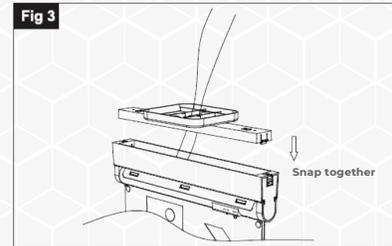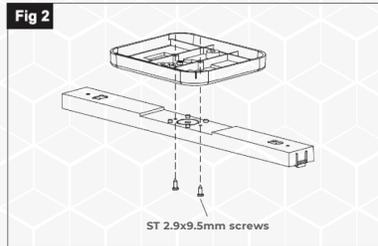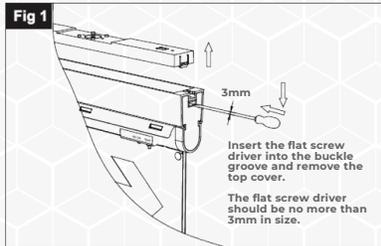






WALL MOUNT

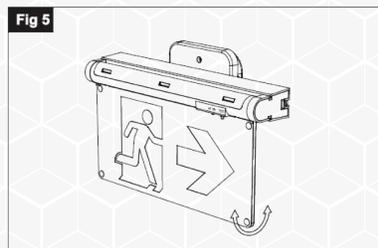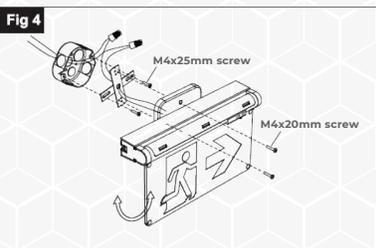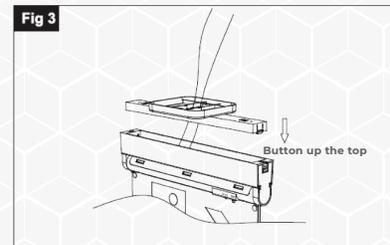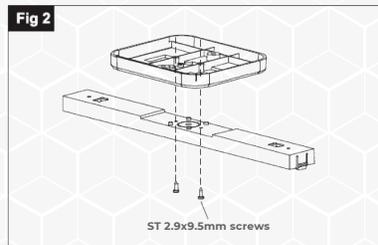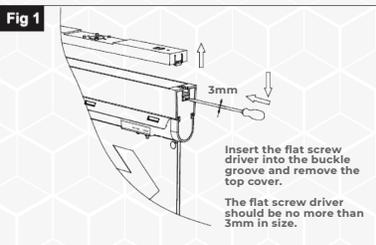

1. Remove the top cover using flat driving (**Fig.1**).
2. Connected the top cover with the canopy using the screws (supplied). (**Fig.2**)
3. Feed AC supply wire through top cover and canopy center hole, snap top cover and the fixture together. (**Fig.3**)
4. Assemble canopy onto junction box with screws (supplied) and make proper wire connections. Black wire(L); White Wire(N);(**Fig.4**).
5. Use screws (supplied) to tighten canopy to mounting plate (spider plate/cross bar). (**Fig.5**)
6. The unit can be installed on any surface, you may rotate the acrylic panel in any angle 0 degrees to 180 degrees. (**Fig.5**)


ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.

WALL SIDE MOUNT

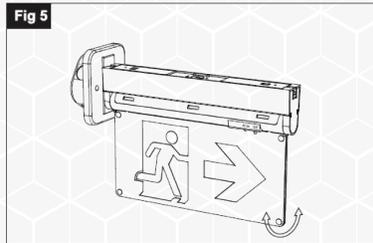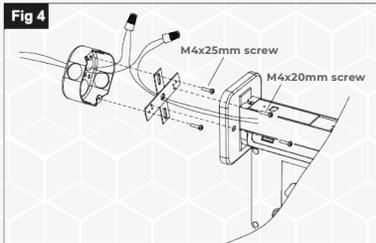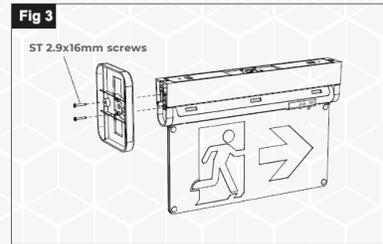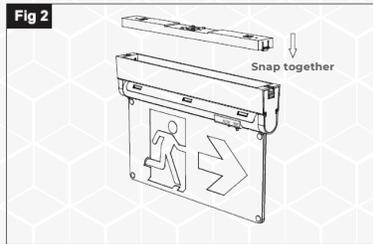
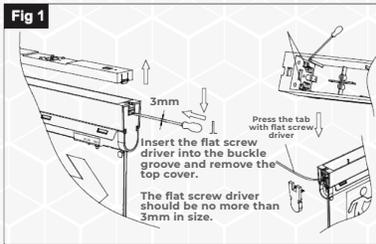


1. Remove the top cover screw driver and remove the end cap. Using flat screwpull out the wires through the side. **(Fig.1)**
2. Snap the top cover into the fixture. **(Fig.2)**
3. Pullout all AC supply wires and feed the wires through the holes of end cap and then canopy. **(Fig.3)**
4. Assemble canopy and end cap to metal bracket with screws (supplied) and make proper wire connections. **(Fig.4)**
5. Use screws (supplied) to tighten canopy to spider plate (crossbar). **(Fig.5)**
6. The unit can be installed on any surface, you may rotate the acrylic panel in any angle 0 degrees to 180 degrees.


CHANGING OR REPLACING PICTOGRAM

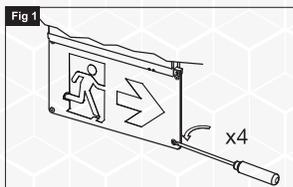

Remove the button (fig. 1, fig. 2)

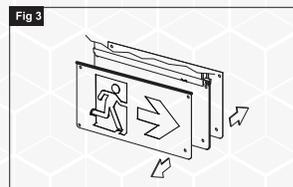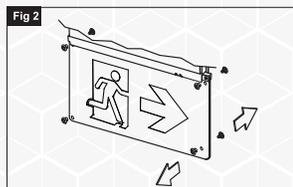

Change to desired pictogram (fig. 3)

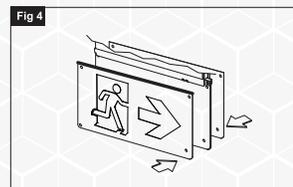

Reinstall buttons and snap them together (fig. 4)

**EXIT LIKE
A PRO,
FOLLOW THE
GLOW**

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.