

Installation Instruction

Linear Recessed Luminaire

ELECTRICAL SHOCK HAZARD

WARNING

Disconnect the Electrical supply at the service panel (fuse or circuit breaker) before installation. Failure to do so could result in serious injury.

Only qualified electricians should install this luminaire and must follow the applicable National Electrical Code Part 1 or the NEC, and any local codes and ordinances. Proper tools and materials to complete the installation are available. Do not attempt to install this luminaire.

Read all instructions prior to installing this product.



This product has multiple installation methods for various ceiling heights. Follow directions closely. This unit is setup for 9/16" Flange style.

IMPORTANT CALCULATION FOR CONTINUOUS RATED



Linear Recessed Fixtures

MOUNTING TYPES & DIMENSION


9/16" Grid Tegular/Lay-In

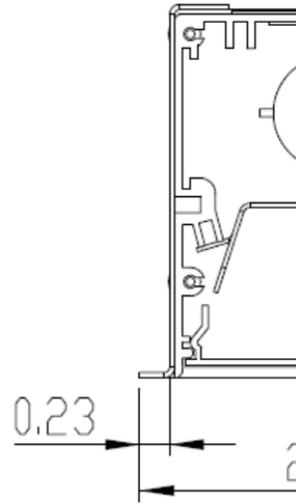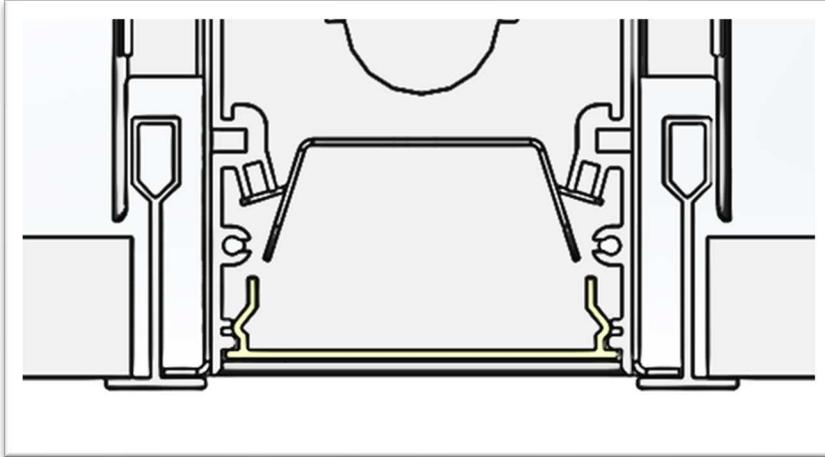

15/16" Grid Tegular/Lay-In

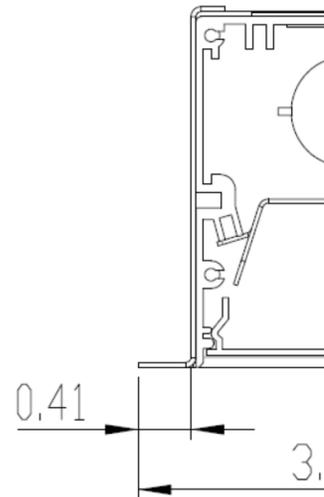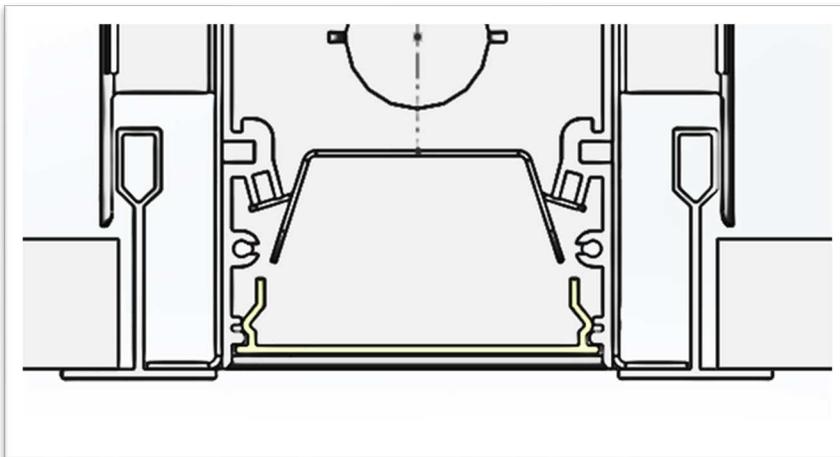


9/16" Slot Grid


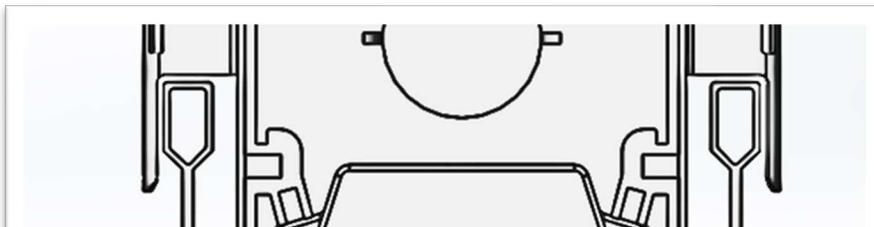


Linear Recessed Fixtures - Grid Mounting options


The side mounting bracket rails can be adjusted for the various grid for correct mounting position according to Ceiling Type. Dashed line Find match mark to bend hanger bracket out by hand . End caps will versions. Default set up is 9/16" Grid.

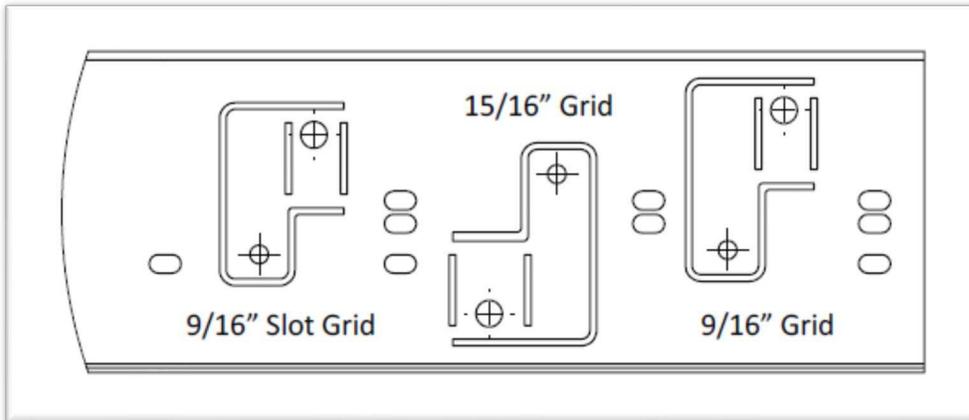

9/16" Grid

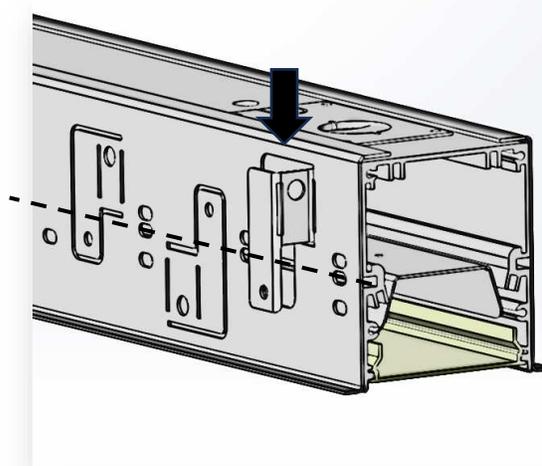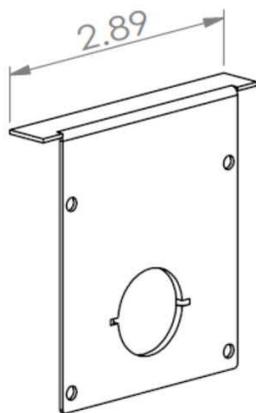



9/16" Slot Grid

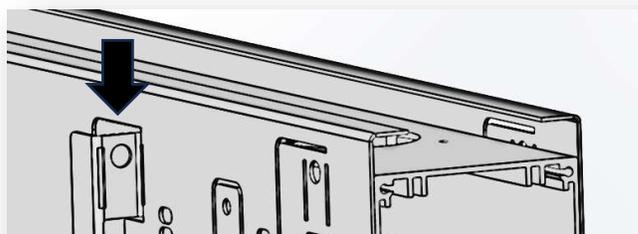


Linear Recessed Fixtures - Drywall Flange mount

The side mounting bracket rails can be adjusted for 2 different flange sizes and changed for other versions. Default set up is 9/16" Grid (smallest flange)

15/16" Grid

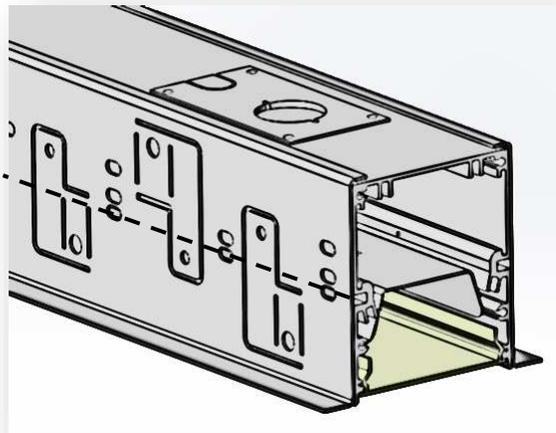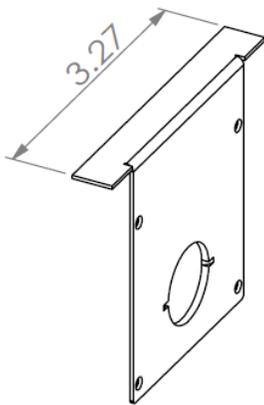


Removal of tabs on the plates

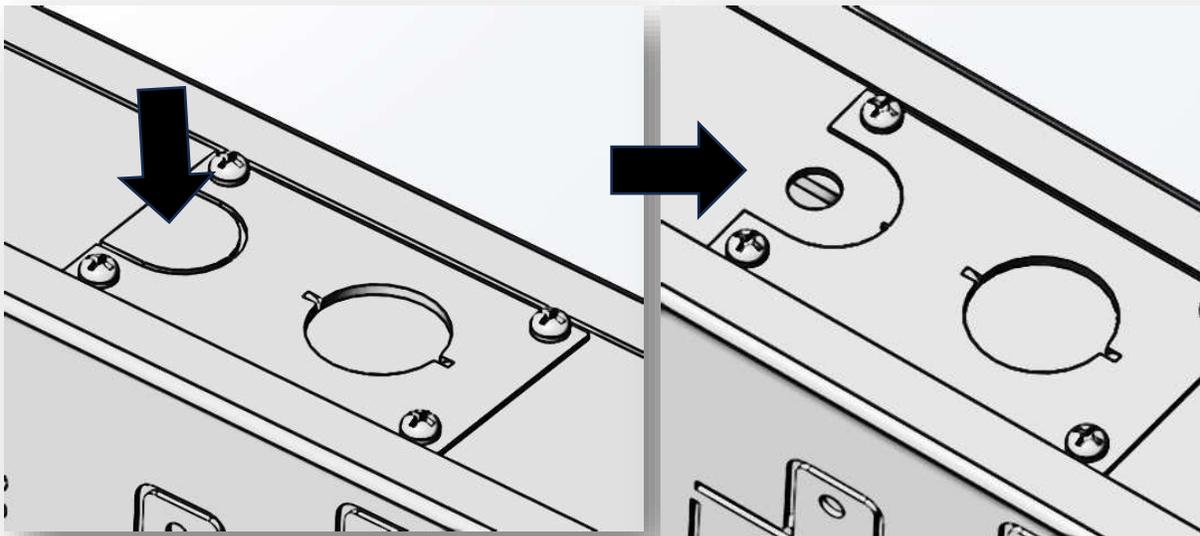


install

Linear Recessed Fixtures - Drywall/Hard Ceiling Trimless

Remove the side mounting bracket rails. Change end cap for flat version secured to structure above install housing through mounting holes per

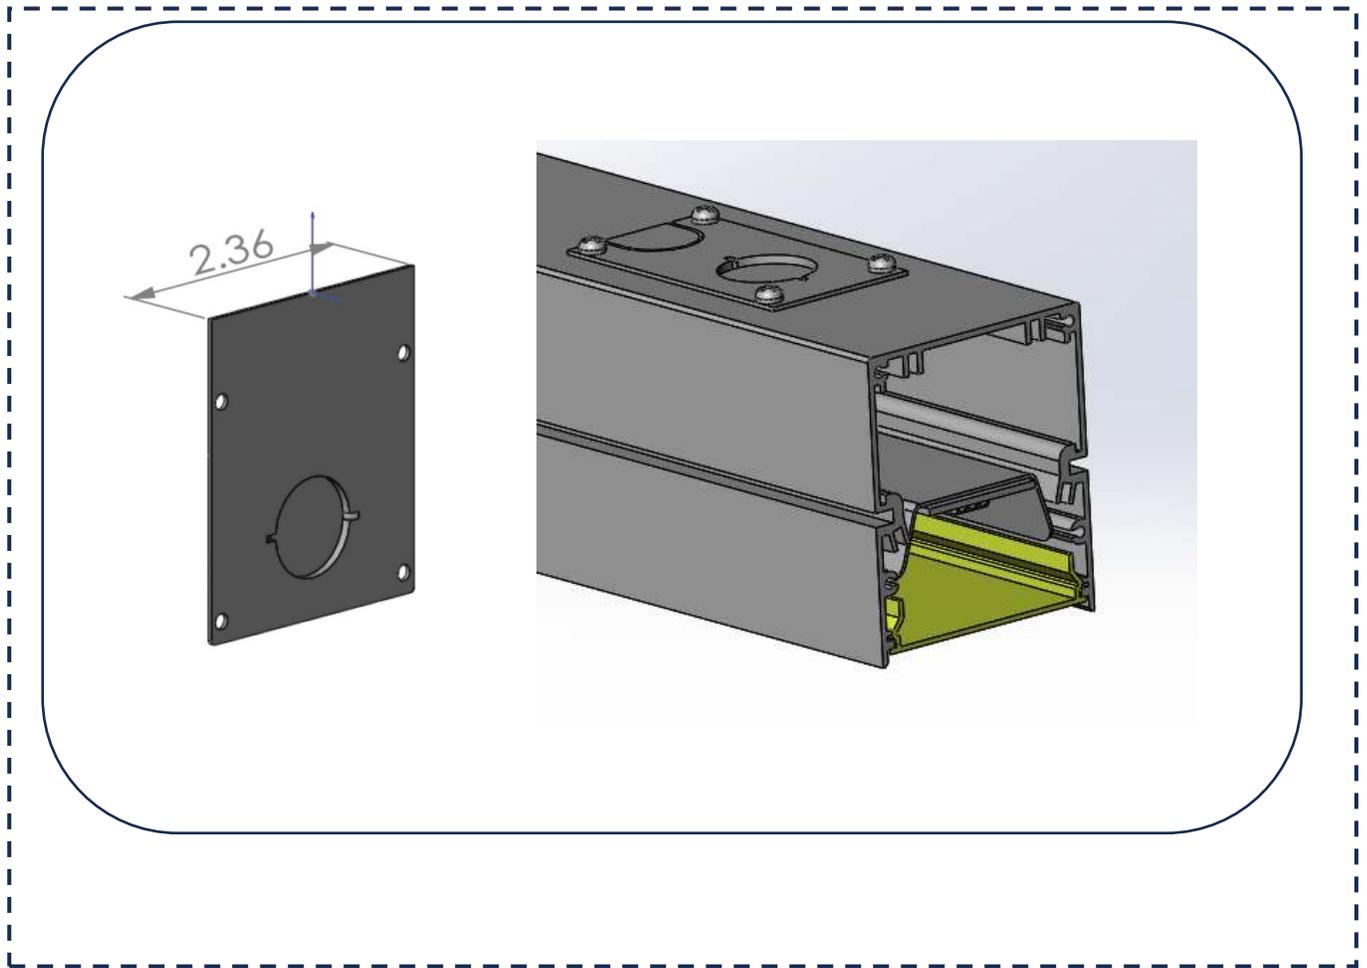


Removal of tabs on the plates

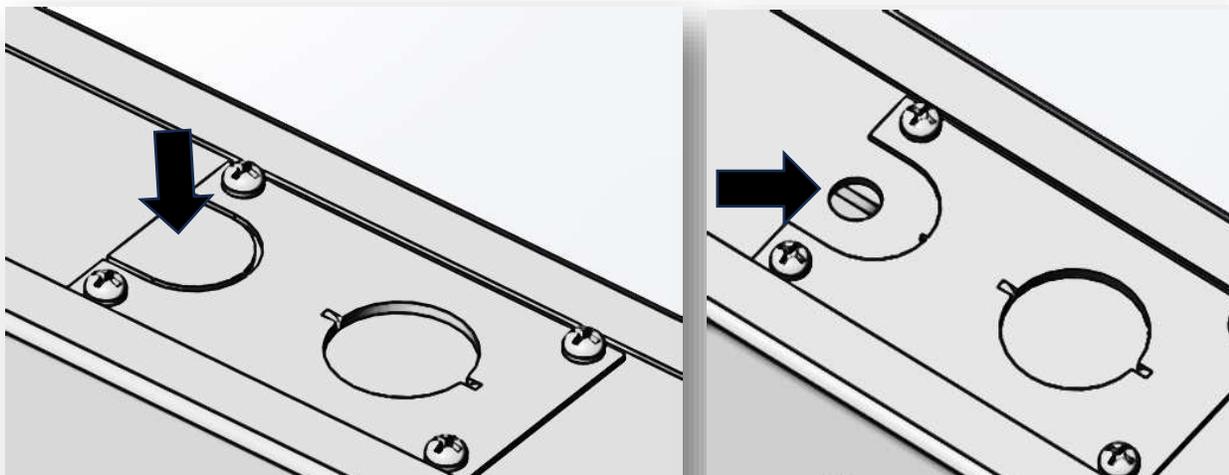


Linear Recessed Fixtures

CONTINUOUS INSTALLATION FOR DIRECT



Loose screws and
remove End cap

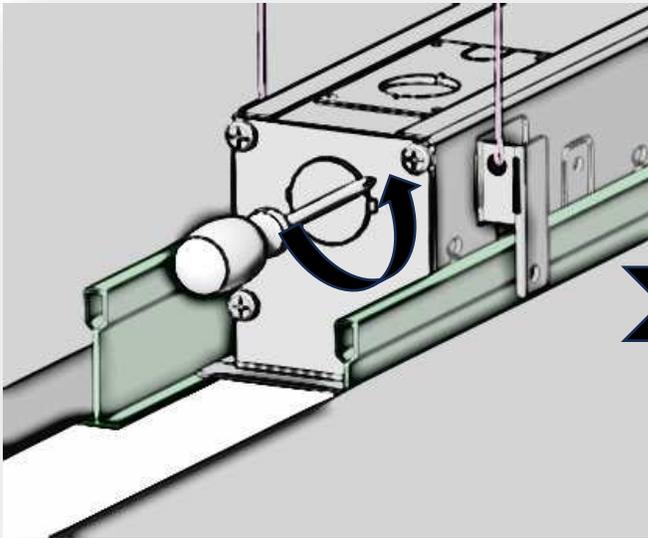


Remove diffuser

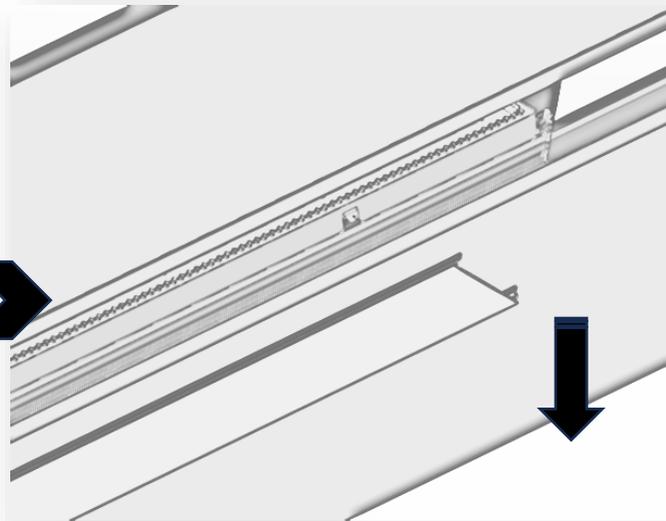

Insert Joint lock holder
to brackets

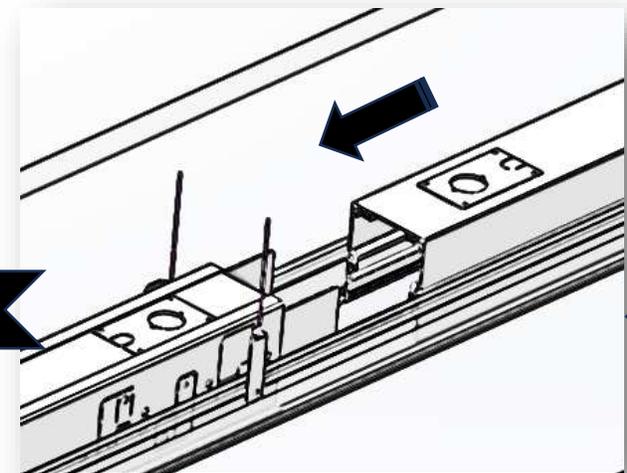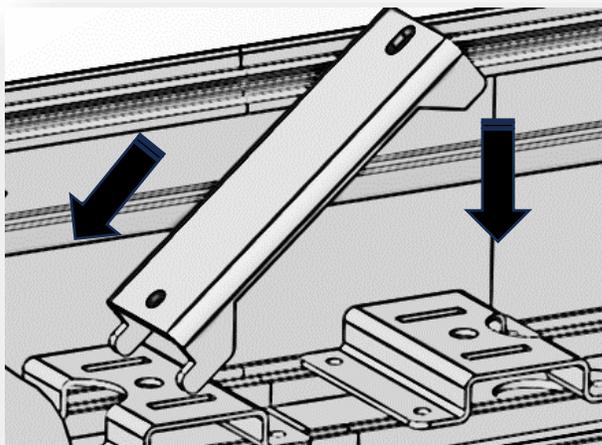

Joint housings

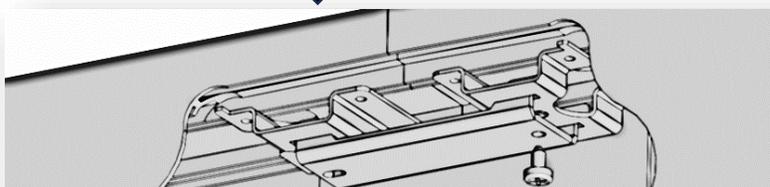

CONNECT WITH

Included Accessories in the Package

1	2	3
		
<p>AL linear light joint lock holder</p>	<p>Joint plate for ZNTH60 RECESS</p>	<p>Lens removal tool</p>
<p>1×1</p>	<p>1×2</p>	<p>1×1</p>