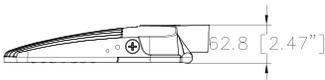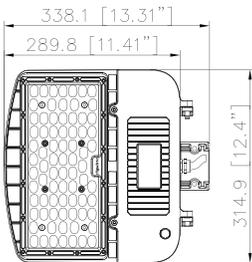# Installation Instruction
LED Area Light

Cautions:

1 Can not use the electric generator to test the LED lamp.
2 Please abide by related country, regional and local law and regulations when installing this fixture.
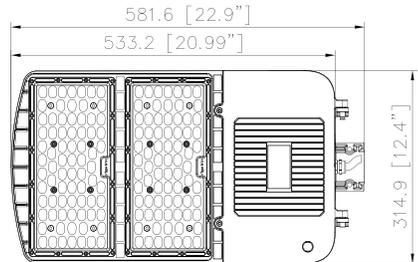3 To avoid electrical shock and damage, ensure that power is off at electrical panel before installing.

Notices:

1 Install by a qualified licensed professional only.
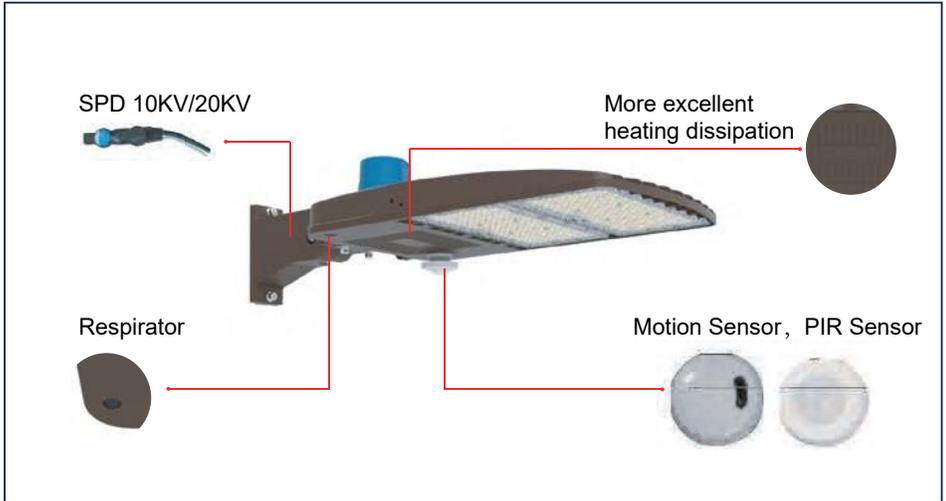2 This light can be used for outdoor installation.
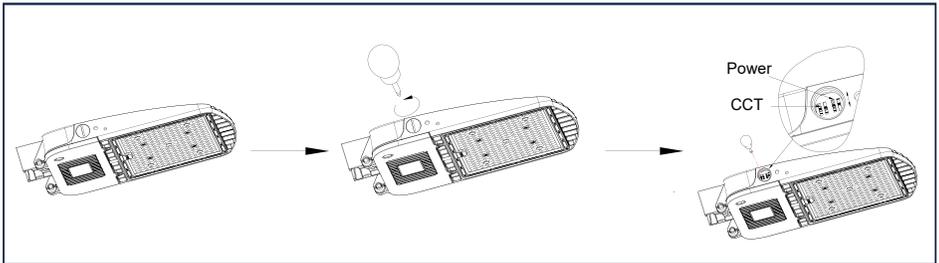
150/100/70W

300/240/200W

≈TUROLIGHT®   Tel: 905-479-7093
Toll Free: 1-888-425-7093   Email: sales@turolight.com
Website: www.turolight.com   **Page 1 of 3**
05/16/23

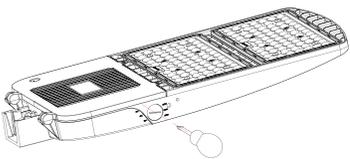# Extended function:

SPD 10KV/20KV

More excellent heating dissipation

Respirator

Motion Sensor，PIR Sensor

CCT / Wattage Selectable

Power

CCT

TUROLIGHT® Tel: 905-479-7093
Toll Free: 1-888-425-7093

Email: sales@turolight.com
Website: www.turolight.com

Page 2 of 3
05/16/23
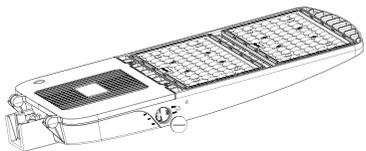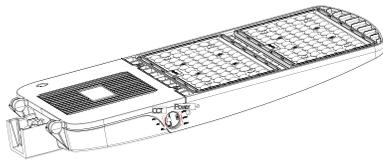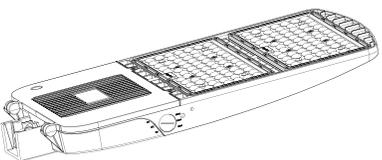
Installation Instruction

1.Adjust power and color temperature installation：

1.Unscrew the plug screws using screws, as shown in Figure 1.

2.Remove the plug screw, as shown in Figure 2.

3.Flip the color temperature switch to the desired color temperature, flip the power switch to the desired wattage, as shown in Figure 3.

4.Install plug screws and tighten them with a screwdriver, as shown in Figure 4.
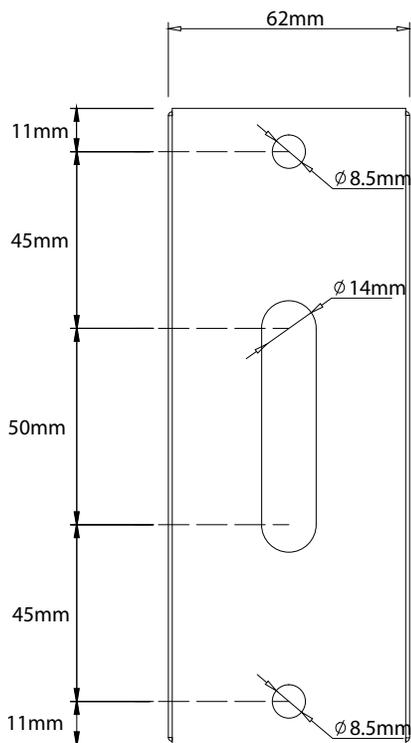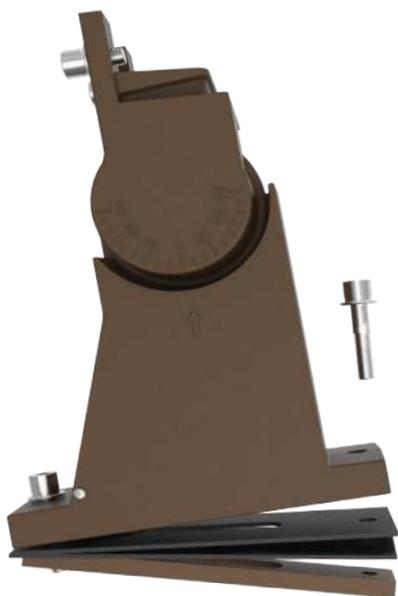
Product Application

Accessories mounting brackets		
TYPE A (Slip-fitter)	TYPE B(Square/Round pole mount with slip- fitter function)	TYPE A+B
TYPE C (Square/Round pole mount)	TYPE D (Trunnion)	TYPE E (Yoke)
TYPE F (Slip fitter+ Arm mounted)		

Use 2pcs M8*40 sc   rews

62mm

11mm

$\varnothing$ 8.5mm

45mm

$\varnothing$ 14mm

50mm

45mm

11mm

$\varnothing$ 8.5mm

Dimensional Drawing
Type A, Slip-fitter bracket

Use 4pcs M8*25 sc rews

82.9mm

⌀62.2mm
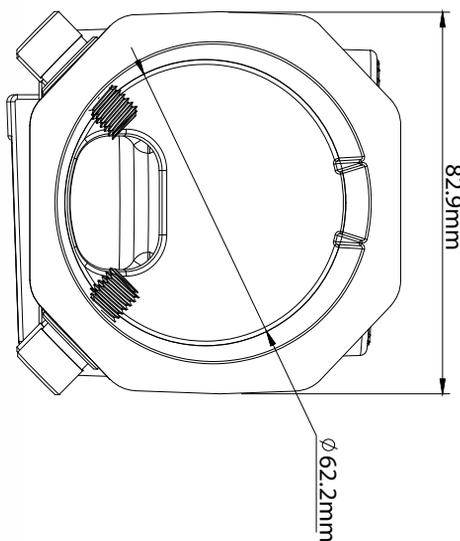
Dimensional Drawing
Type D, Trunnion bracket

19mm 17mm 24mm

34mm

60mm

34mm

Ø 18mm Ø 12mm
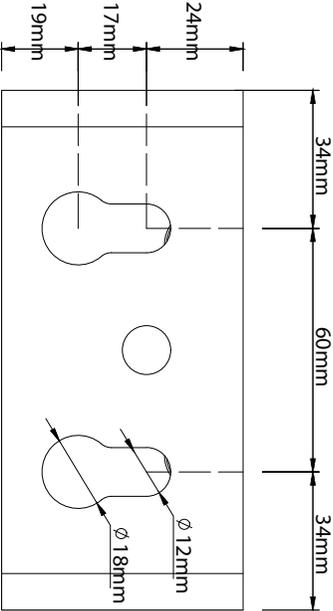
Dimensional Drawing
Type E, Yoke bracket

16mm

Ø13mm

Ø12mm

147.6mm

77mm

Ø20mm

Ø12mm

40mm

Ø13mm