

2" SLIM LIGHTS SLIM-TL2-5CCT



WARNING

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

- LED Slim lights are suitable for indoor use only
- Please keep the LED Slim lights away from any corrosive substance, and please use dry cloth when you clean it
- Before installation or maintenance, please disconnect the power to prevent electric shock

CAUTION

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

- Electrical products can cause death or injury, or damage to property.
- If in any doubt about the installation or use of this product, consult a competent electrician.

TOOLS REQUIRED



Saw





Measuring Tape



Electrical Wiring


PRE-INSTALLATION

1. Turn power OFF from the electrical panel before starting installation.
2. Locate a suitable position to plate the fixture and open in accordance to the cut-hole dimensions (refer to Hole Cut Table for appropriate size).
3. Run electrical wire from the switch (power supply) through the mounting hole-use NMD90 Romex or BX cable.
4. Align the inside edge of the Zero Clearance plaster frame to the drywall hole and screw in place. **(Fig.1)**
5. Plaster over the plaster frame, be careful not to fill past raised rim. **(Fig.2)**

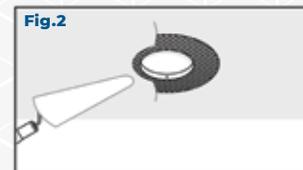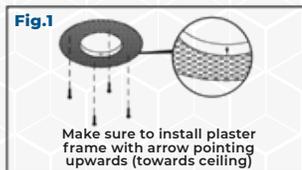

DRIVER WIRING


1. Open the hardwire box swing cover and remove the appropriate knockout(s).
2. Insert the electrical supply cable through the knockout and secure with a cable connector **(sold separately)**.
3. Using wire nuts, connect green ground wire of cable to green wire on box. Connect white wire of cable to white wire of box. Connect black wire of cable to black wire of box. **(Fig.3)**
4. Place all wiring and connections back in to the box and close the cover.
5. Insert hardwire box through the mounting hole. **(Fig.4)**

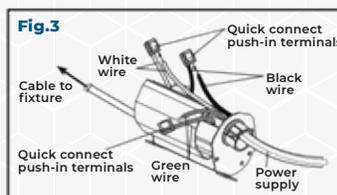

ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.

FIXTURE INSTALLATION

1. Connect the fixture to the hardwire box by inserting and twisting the male/female connectors. (Fig.3.4)
2. Select desired color temperature using the selector button at the back of the fixture (preset to 3000 K) (Fig. 5).
3. Insert the fixture to plaster frame, secure the lamp by twisting the fixture appropriately to the plaster frame. (Fig.6)
4. Once assembly is complete, turn on power to confirm fixture is working properly.

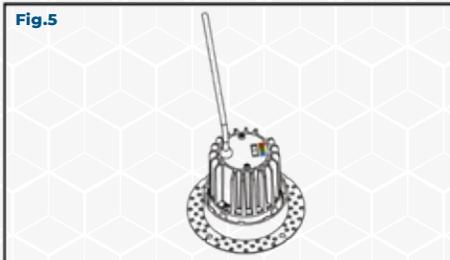

NEW CONSTRUCTION APPLICATIONS

Hardwire box shall be firmly secured to studs, joists, or similar fixed structural units.

REMODEL APPLICATIONS

DO NOT require the hardwire box to be firmly secured after the mounting plates, studs, joists, or structural units have been concealed.



ORTECH reserves the right to modify at any time, without notice, any or all of our product's features, designs, components and specifications to meet market changes.