ORTECH
Instruction Manual

LED SLIM LIGHTS

SLIM4BP-CONT

WARNING

WARNING — THE INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

- LED Slim Lights are suitable for indoor use only. DO NOT use outdoors
- Please keep the LED Slim Lights away from any corrosive substance, and please use dry cloth when you clean them
- LED Slim Lights can only be installed by a qualified electrician
- Before installation or maintenance, please disconnect the power to prevent electric shock

APPLICATION NOTICE

- For your safety, this fixture **MUST be** wired in accordance to electrical codes and ordinances
- **DO NOT** open the light fixture and the side plates of driver — no serviceable part inside
- **DO NOT** use any other driver except the ones advised by the supplier
- **DO NOT** connect multiple fixtures to one driver

Wet Location

CAUTION

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.
Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician.

INSTALLATION GUIDE

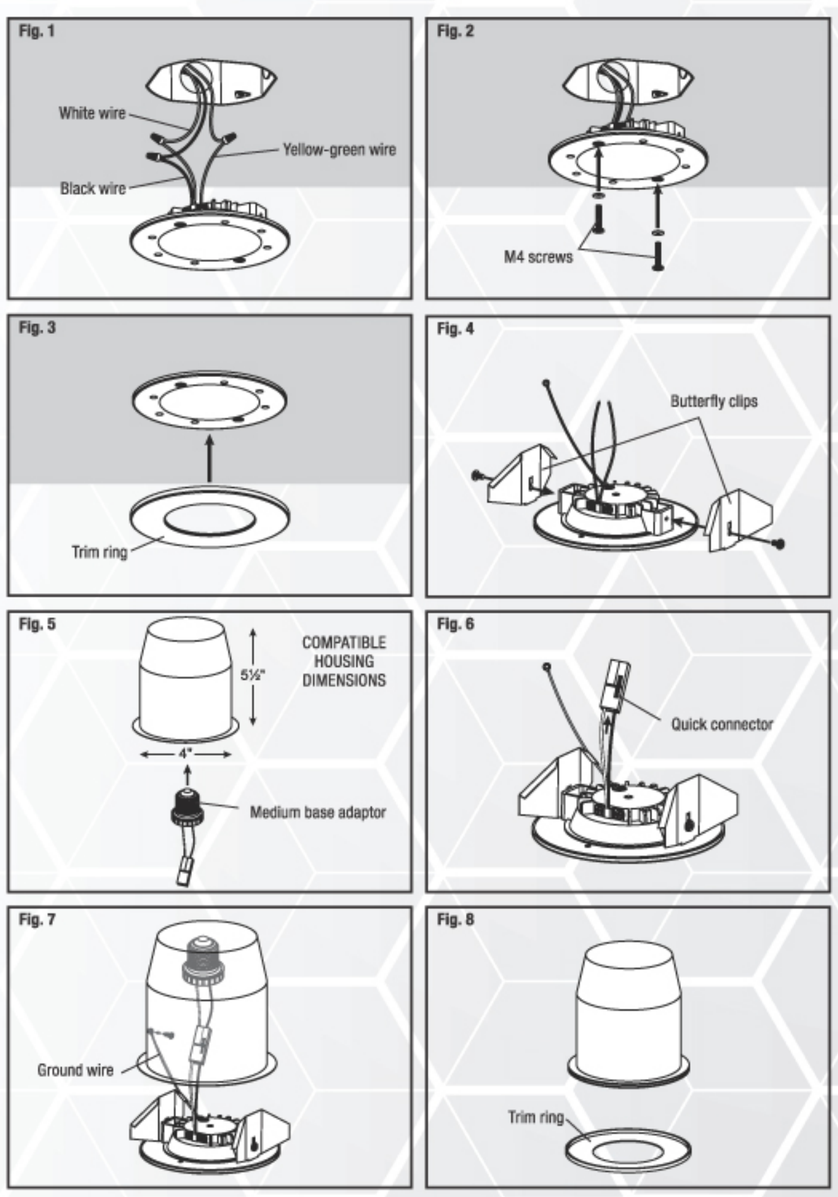

SEMI RECESSED MOUNT INSTALLATION:

STEP 1: Cut the terminal ring at the end of the ground wire(yellow-green) on the back of the luminaire. Make the electrical connections. Connect the ground wires (yellow-green/green). Connect the neutral wires (white). Connect the live wires (black) **(Fig. 1)**

STEP 2: Secure the luminaire to the junction box with provided M4 screws with silicone washer **(Fig. 2)**

STEP 3: Install the selected trim ring by placing the metal side towards the luminaire. The magnets on the luminaire will secure the trim ring in place **(Fig. 3)**

STEP 4: Turn on the power for testing.

RECESSED HOUSING INSTALLATION:

STEP 1: Secure the butterfly clips to the luminaire with the two screws provided **(Fig. 4)**

STEP 2: Secure the medium based adaptor into socket in recessed housing **(Fig. 5)**

STEP 3: Insert the wires from the luminaire to the quick connector. Connect the live(black) wire to the marked slot of the quick connector **(Fig. 6)**

STEP 4: Connect the ground wire (yellow-green) by securing the terminal ring to the recessed housing using the provided self-tapping screw. Use 1/8" drill bit the hole on the recessed housing for the self-tapping screw. (Hook up the light with the medium base adaptors by the quick connectors.) Squeeze spring clips and install the luminaire in recessed housing. Make sure the luminaire is entered in recessed housing **(Fig. 7)**

STEP 5: Install the selected trim ring by placing the metal side towards the luminaire. The magnets on the luminaire will secure the trim ring in place **(Fig. 8)**

STEP 6: Turn on the power for testing.

www.ortechindustries.ca
TF 1.888.543.6473
13376 Comber Way, Surrey, BC V3W 5V9
205 Summerlea Road, Brampton, Ontario
info@ortechindustries.com
604.543.6473